



- | | | |
|---------------------------------------|-----------------------------|----------------------------------|
| 1. Fuel transfer selector valve | 5. Propeller pitch controls | 9. Propeller lock |
| 2. Carburetor air temperature control | 6. Landing gear control | 10. Hand hydraulic pump handle |
| 3. Wing flaps position indicator | 7. Fuel shut-off valves | 11. Throttle lock |
| 4. Throttle controls | 8. Supercharger controls | 12. Wing flaps hydraulic control |

Figure 16—Left Side View of Pilot's Cockpit

- | | | |
|---|--|--|
| 1. Light | 12. Landing gear safe light dimming switch | 23. Running lights switch |
| 2. Propeller feathering switches | 13. Bomb release indicator light | 24. Battery main line switches |
| 3. Landing gear warning horn silencing switch | 14. A. F. C. E. gang switch | 25. Starting and meshing switches |
| 4. Primer switch | 15. Landing light switch | 26. Wing flaps hydraulic control |
| 5. Bombardier call light switch | 16. Master nose gun switch | 27. Emergency bomb-salvo release control |
| 6. Nose gun camera light switch | 17. Propeller feathering switches | 28. Panel and radio lights rheostat |
| 7. Bombardier call light | 18. Propeller pitch control | 29. Gun sight light rheostat |
| 8. Camera exposure light | 19. Fuel booster pumps switches | 30. Instrument panel light switches |
| 9. Precessing switch | 20. Oil dilution switches | 31. Nose gun charging valve |
| 10. Bomb door open indicator light | 21. Pilot compartment light switch | 32. Compass light rheostat |
| 11. Landing gear safe light | 22. Pilot heater switch | 33. Formation lights rheostat |

Figure 15—Pilot's Switch Panel