

## SECTION X SIDE GUNNER'S COMPARTMENT



### 1. LIGHTING.

The dome light switch is aft of the entrance door.

### 2. INTERPHONE CONTROLS.

Interphone jack boxes are provided for both gunners. Refer to section I, paragraph 10., for operation.

### 3. SUIT HEATER OUTLET.

Rheostats control the temperature of the gunners' heated suits. They are adjusted to obtain the desired temperature in the suits.

### 4. OXYGEN.

Oxygen regulators and portable oxygen units are provided for each side gunner. Refer to section I, paragraph 9., for instructions.


### 5. EMERGENCY EQUIPMENT.

a. **FIRE EXTINGUISHER.** - A carbon tetrachloride fire extinguisher is attached to the forward side of the bulkhead aft of the main entrance.

b. **EMERGENCY RELEASES.** - Each side window has an emergency release bar on the forward side of each window. To open the window, jerk the bar forward. There are no catches to be released. The main entrance door also has an emergency release handle.

### 6. GUN OPERATION.

To prepare the machine guns for action, remove the straps (figures 76 and 77) and swing the guns into position.

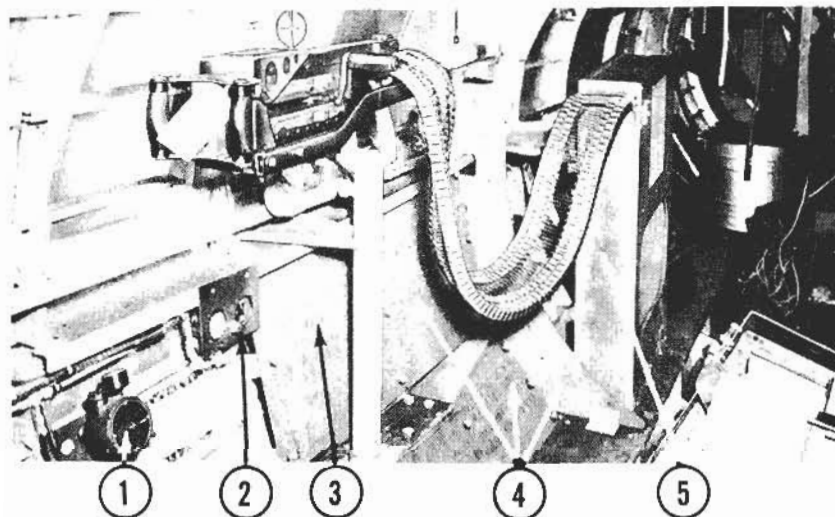

KEY TO FIGURE 76

1. PORTABLE OXYGEN UNIT 2. OXYGEN INDICATOR PANEL 3. MACHINE GUN, STOWED  
4. ARMOR PLATE 5. AMMUNITION BOX

Figure 76 - Right Side Gun Stowed

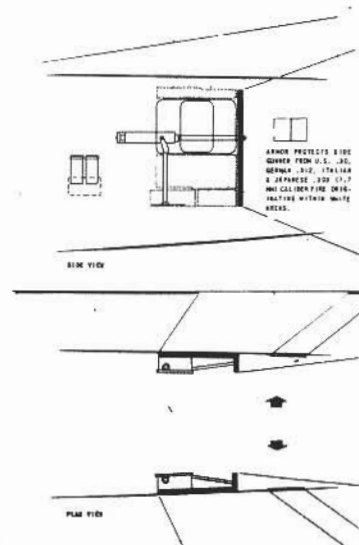


Figure 77 - Side Gunner's  
Armor Protection