



- | | |
|---|---|
| 33. Lower Left Cockpit Light | 46. Wing Flap Manual Control |
| 34. Tail Wheel Lock Control | 47. Map Case |
| 35. Rudder Trim Tab Control | 48. Elevator Trim Tab Control |
| 36. Cowl Flaps Control | 49. Aileron Trim Tab Control |
| 37. Oil Cooler-Intercooler Shutters Control | 50. Fuel Tank Pressurizing Control |
| 38. Droppable Fuel Tank Release Switch | 51. Propeller Pitch Control |
| 39. Mask Microphone Switch | 52. Fuel Selector Valve Dialface |
| 40. Upper Left Cockpit Light | 53. Reserve Fuel Tank Warning Light |
| 41. Throttle Control | 54. Fuel Tank Selector Valve |
| 42. Mixture Control | 55. Oil Dilution Switch |
| 43. Wing Flap Electrical Switch | 56. Propeller Pitch Vernier Control |
| 44. Supercharger Control | 57. Engine Control Quadrant Friction Knob |
| 45. A.D.I. Pump Control Switch | 58. Auxiliary Electric Fuel Pump Switch |

Figure 26 - Cockpit - F6F-3 - Left Side