



- | | |
|---|-------------------------------------|
| 59. Cabin Sliding Hood Control | 71. Access to Reverse Current Relay |
| 60. Battery Switch | 72. Machine Gun Switches |
| 61. Main Electrical Distribution Panel | 73. Hydraulic Hand Pump |
| 62. Electrical Panel Light | 74. Gunsight Rheostat and Switch |
| 63. Radio Controls | 75. Bomb Control Switches |
| 64. Recognition Lights | 76. Hand Microphone |
| 65. Hand Pump Selector Valve | 77. Pyrotechnic Cartridge Clips |
| 66. Aft Right Cockpit Shelf Light | 78. Pyrotechnic Pistol Retainer |
| 67. Hydraulic System Pressure Gage | 79. Radio Controls |
| 68. Landing Gear Emergency Dump Pressure Gage | 80. Radio Destruction Switch |
| 69. Wing Locking Hydraulic Control | 81. Microphone Jacks |
| 70. Manual Reset Circuit Breaker Panel | 82. IFF Equipment Support |

Figure 28 - Cockpit - F6F-3 - Right Side