



- |                                |                                   |
|--------------------------------|-----------------------------------|
| 1. LANDING GEAR WARNING LIGHT  | 14. WING BOWS SWITCH              |
| 2. COCKPIT LIGHT               | 15. FUSELAGE GUNS SWITCH          |
| 3. LANDING GEAR SWITCH         | 16. CANNON SWITCH                 |
| 4. FLAPS SWITCH                | 17. GUN SIGHT RHEOSTAT            |
| 5. THROTTLE CONTROL LEVER      | 18. AMMETER                       |
| 6. MICROPHONE CONTROL BUTTON   | 19. FUEL BOOSTER PUMP SWITCH      |
| 7. MIXTURE CONTROL LEVER       | 20. PITOT HEATER SWITCH           |
| 8. FLUORESCENT LIGHT RHEOSTAT  | 21. NAVIGATION LIGHT SWITCH, WING |
| 9. COCKPIT LIGHT SWITCH        | 22. GENERATOR CONTROL SWITCH      |
| 10. PROPELLER CONTROL          | 23. IGNITION SWITCH               |
| 11. LANDING LIGHT SWITCH       | 24. NAVIGATION LIGHT SWITCH, TAIL |
| 12. LANDING LIGHT MOTOR SWITCH | 25. BOMB RELEASE HANDLE           |
| 13. AUXILIARY FUSE BOX         | 26. OIL DILUTION SWITCH           |

Figure 6 - Cockpit - Left-hand Side

- |                                  |
|----------------------------------|
| 1. WING DE-ICER SWITCH           |
| 2. RADIO RELAY SWITCH BOX        |
| 3. KEY                           |
| 4. TRANSMITTER SELECTOR          |
| 5. VOICE AND TONE CONTROL        |
| 6. TRANSMITTER POWER SWITCH      |
| 7. FLUORESCENT LIGHT RHEOSTAT    |
| 8. EMERGENCY DOOR RELEASE HANDLE |
| 9. PROPELLER DE-ICER CONTROL     |
| 10. OXYGEN WARNING LIGHT         |
| 11. CONTACTOR HEATER SWITCH      |
| 12. STARTER PEDAL                |

Figure 7 - Cockpit - Right-hand Side