


instrument panel
F-86F-1 THROUGH F-86F-30 AIRPLANES
(TYPICAL)

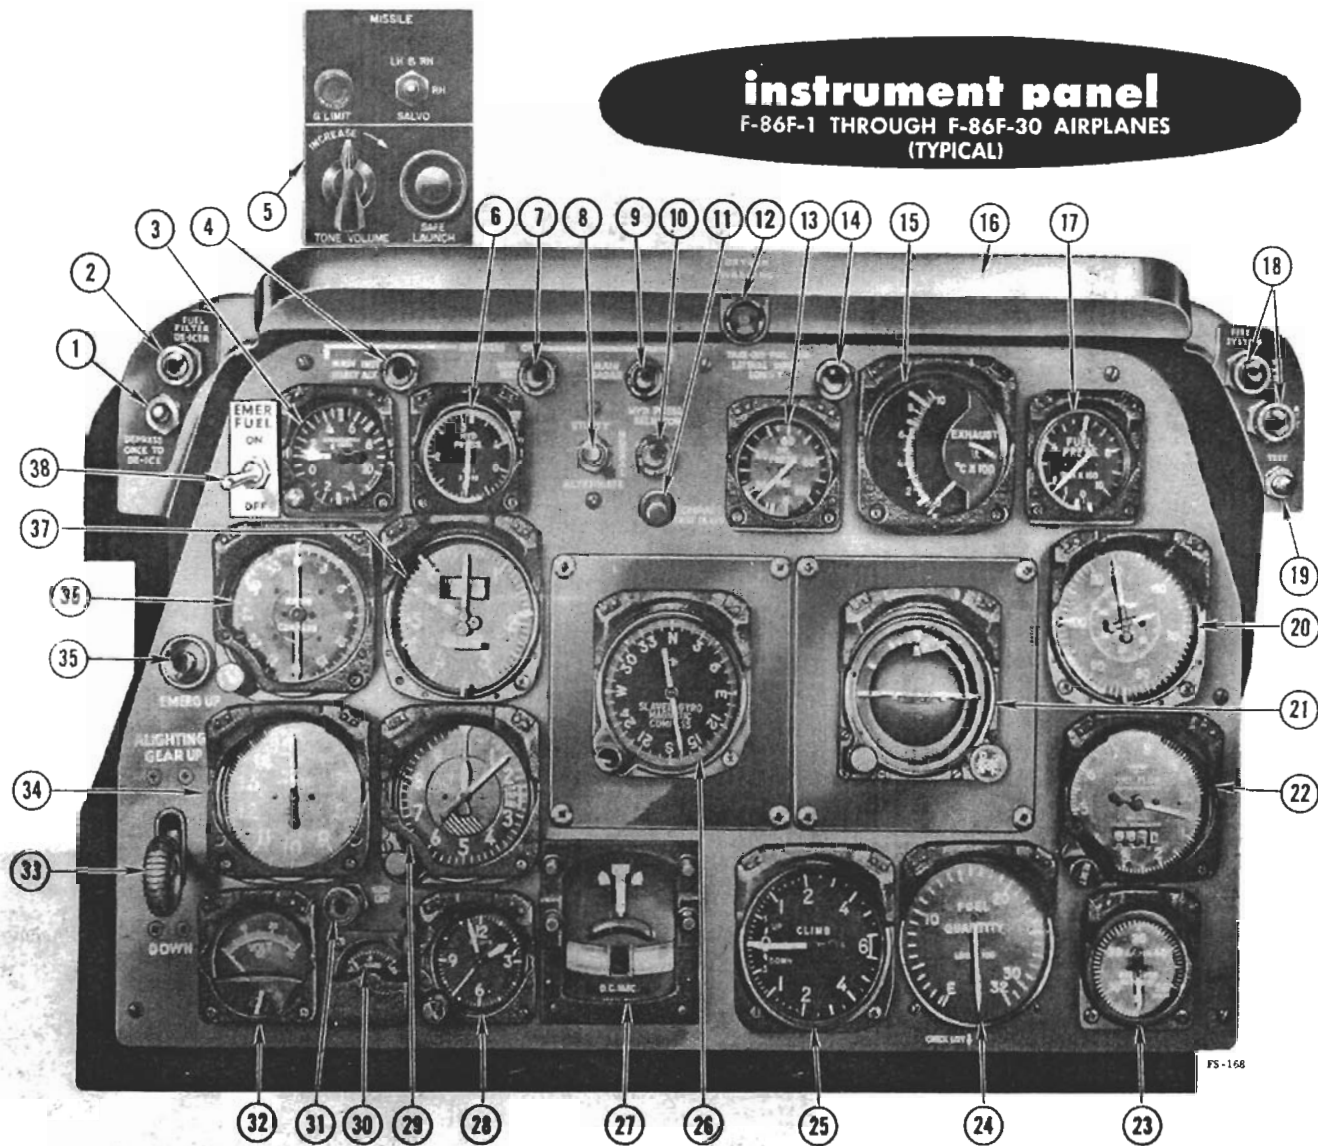

- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Fuel Filter Deicing Button * 2. Fuel Filter Ice Warning Light * 3. Accelerometer 4. Main Instrument (Three-phase) Inverter Failure Warning Light 5. Missile Control Panel * 6. Hydraulic Pressure Gage 7. Both Instrument (Three-phase) Inverter Failure Warning Light 8. Hydraulic Pressure Gage Selector Switch 9. Main Radar (Single-phase) Inverter Failure Warning Light 10. Alternate-on Warning Light (Flight Control Alternate Hydraulic System) 11. Directional Indicator (Slaved) Fast Slaving Switch 12. Oxygen Warning Light (Inoperative) 13. Oil Pressure Gage 14. Take-off (Trim) Position Indicator Light 15. Exhaust Temperature Gage 16. Instrument Panel Shroud 17. Fuel Pressure Gage * | <ul style="list-style-type: none"> 18. Fire-warning Lights 19. Fire-warning Light Test Button 20. Tachometer 21. Attitude Indicator 22. Fuel Flowmeter and Totalizer 23. Cabin Pressure Altimeter 24. Fuel Quantity Gage 25. Vertical Velocity Indicator 26. Directional Indicator (Slaved) 27. Turn-and-Slip Indicator 28. Clock 29. Altimeter 30. Loadmeter 31. Generator Warning Light 32. Voltmeter 33. Landing Gear Handle 34. Mach Indicator * 35. Landing Gear Emergency-up Button 36. Radio Compass Indicator * 37. Airspeed Indicator * 38. Emergency Fuel Switch |
|--|---|

* Some airplanes. (Refer to applicable text.)

F-86F-1-00-67D

Figure 1-6